

Cospet Srl - Via Volta 5/7 - 42028 (Reggio Emilia) Italy
Tel. +39 0522 682483 Fax +390522 683262
Mail. commerciale@cospet.it
Reg. Imprese RE C.F. e P.I. 00662560358
Export RE 010087 - C.C.I.A.A. di RE REA n. 145908 Cap.Soc. € 18000,00 I.v.

HL 292



COMUNICAZIONI - NOTE

*I ricambi **EVIDENZIATI in GRASSETTO** sono quelli disponibili presso il Ns magazzino e reperibili/spedibili in 24/48 ore.*

La COSPET SRL si riserva sui ricambi non evidenziati negli esplosi di reperirli con tempistiche che andranno dai 60 ai 120 giorni.

Su tutte le urgenze e i via Aerea richiesti, per anticipare i tempi di consegna del materiale non disponibile sugli esplosi, verranno addebitate le Spese di trasporto.




MOTORE / ENGINE

MODEL HL 292 FE HP 22 HAILIN

Doppio cilindro, raffreddamento ad aria / Double cylinder, air cooled


Alesaggio corsa / Bore Stroke	2x (92 x 75mm)
Cilindrata / Displacement	997 cc
Max potenza resa / Max output	22 Hp
Potenza uso continuo / Continuous output	20 Hp
Giri motore / Engine speed	3600 r.p.m.
Carburante / Fuel	Diesel
Capacità Serbatoio / Fuel Capacity (Lt)	7 Lt
Capacità Serbatoio Olio / Fuel Oil Capacity (Lt)	2,6 Lt
Avviamento Standard / Starting System	Manuale - elettrico / Recoil - electric
Tipo Olio / Lube oil type	10W40
Dimensioni / Dimension	470 x 465 x 590
Peso a secco / Dry Weight	88 Kg

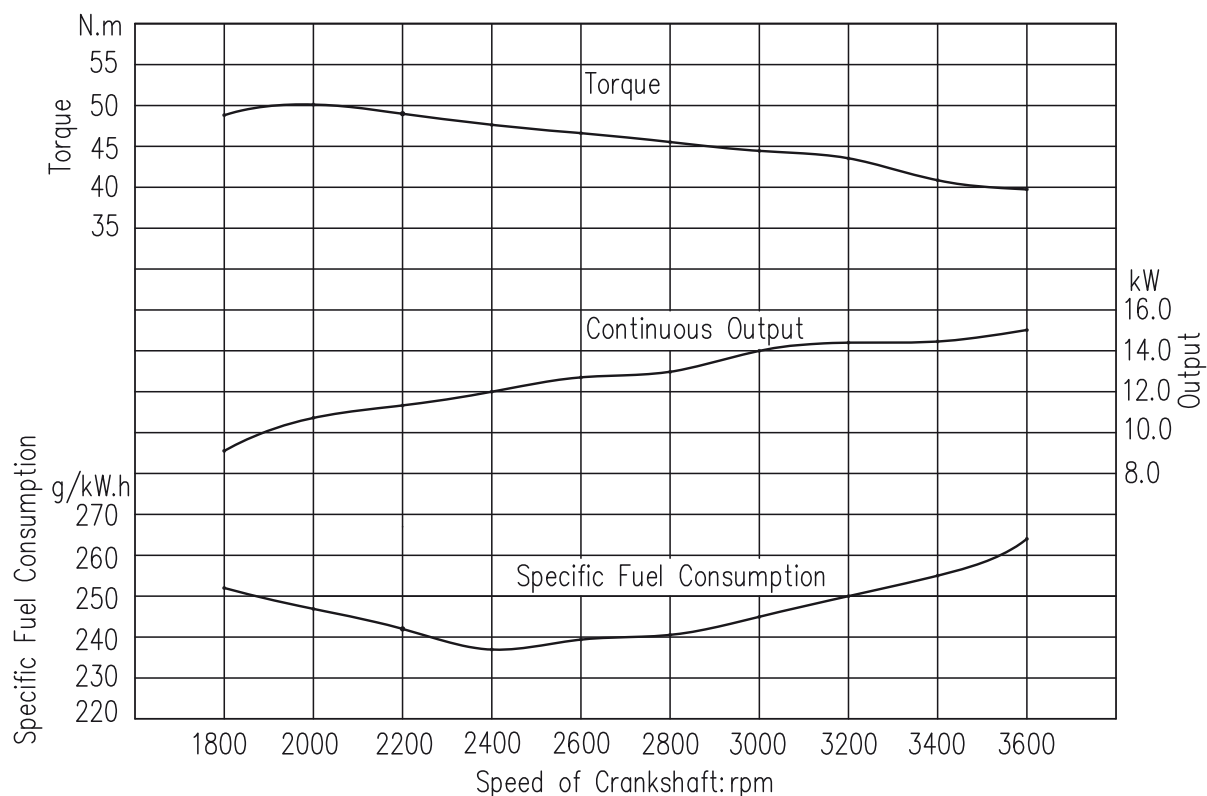

VERSIONE / VERSIONS



Albero conico D. 38
Type shaft

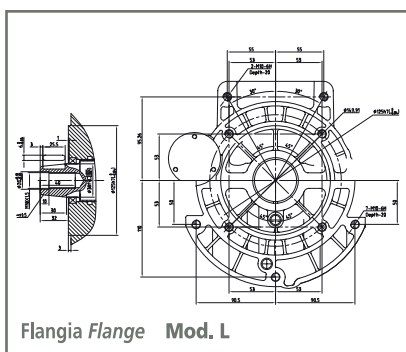


HL 292 FE- L cod. WP2290700

- Albero Conico D.38
- Avviamento Elettrico
- Filtro Aria bagno olio




Albero cilindrico D. 36,5
Cilindric shaft

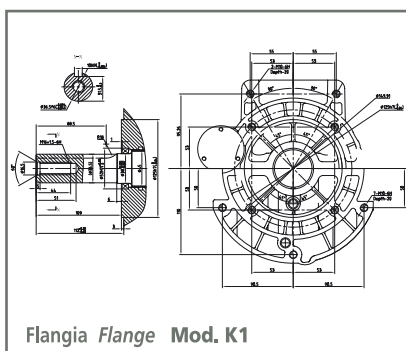


HL 292 FE K1 cod. WP2290540

- Albero Cilindrico D. 36,5
- Avviamento Elettrico
- Filtro Aria bagno olio

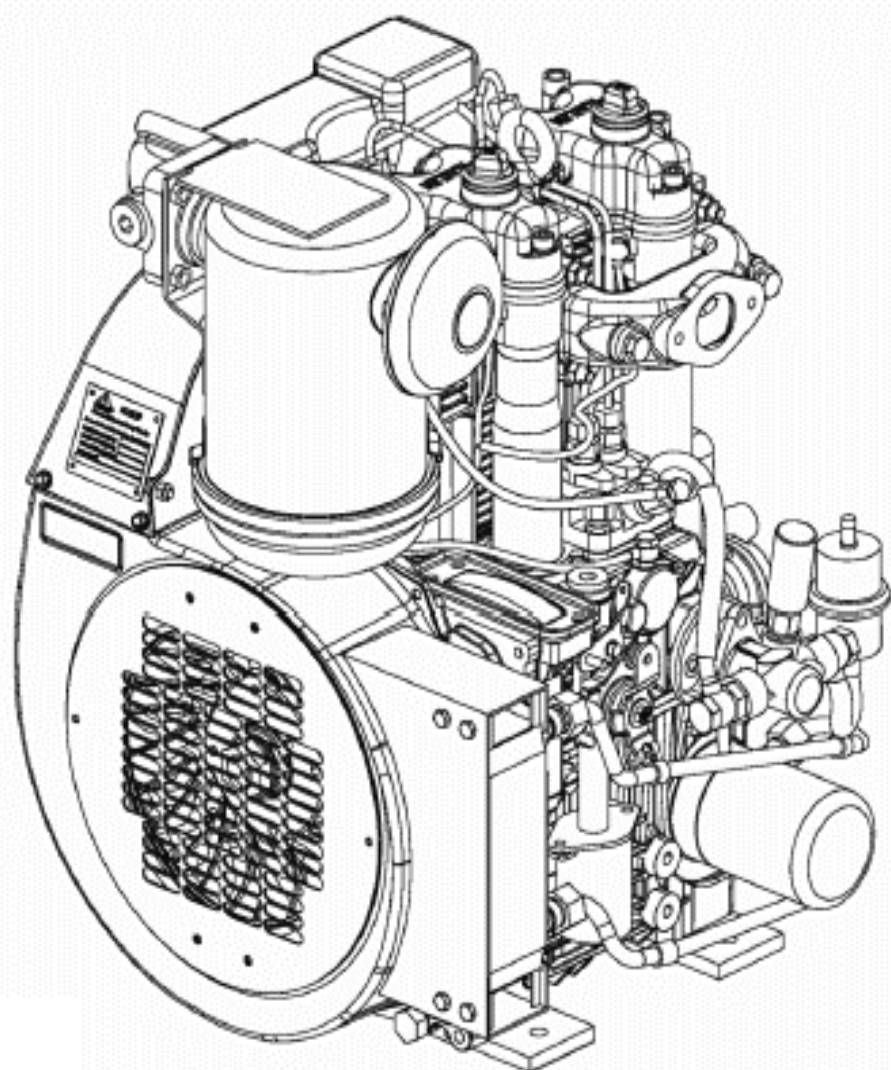

HL 292

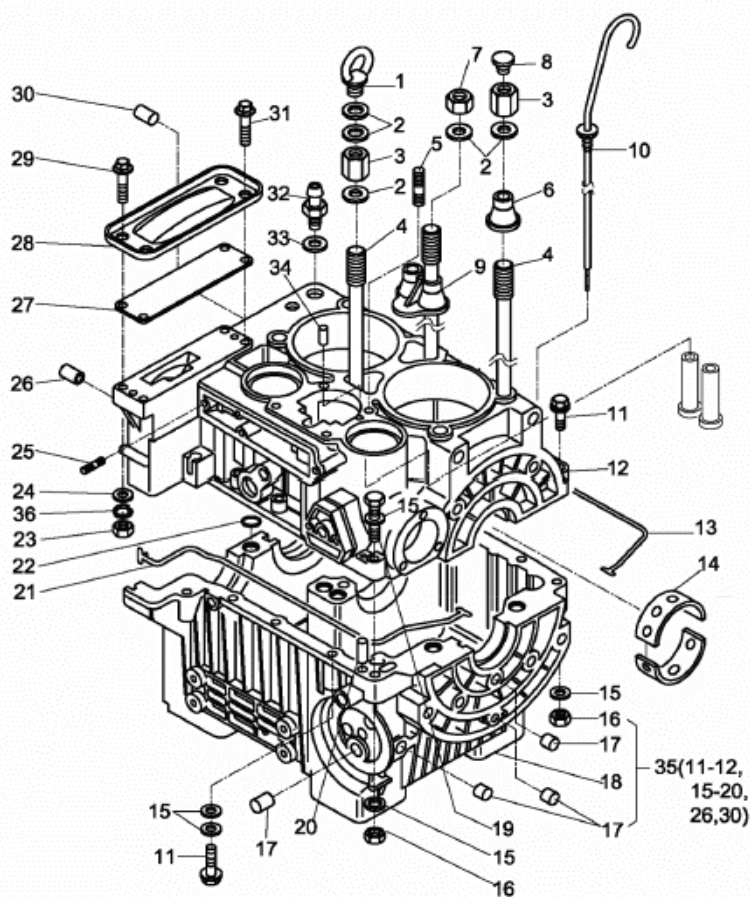

CRANKCASE - CARTER


1	CODICE - CODE	DESCRIZIONE - DESCRIPTION	QT
1	HL 825-10000A2	LIFTING EYEBOLT M10	
2	HL 186F-01005	GUARNIZIONE - FLAT WASHER	
3	HL 292F-01003	DADO - CYLINDER HEAD NUT	
4	HL 292F-01005	PRIGIONIERO - CYLINDER HEAD STUD	
5	HL 900-08020A2	STUD M 8X20	
6	HL 292F-01008	TENUTA GOMMA I - SEAL BOLT RUBBER	
7	HL 292F-01004	CYLINDER HEAD NUT SHOT	
8	HL 292F-01007	SEAL NUT RUBBER	
9	HL 292F-01009	TENUTA GOMMA II - SEAL NUT RUBBER	
10	HL 292F-01010	ASTA DI LIVELLO OLIO - OIL DIPSTICK	
11	HL 5789-06050A2	BOLT M 6X50	
12	HL 292F-01001	CARTER I - CRANKCASE I	
13	HL 292F-01011	TENUTA CARTER I - CRANKCASE SEAL I	
14	HL 292F-01013	COVER CUSCINETTO - MAIN BEARING SHELL	
15	HL 97.1-06A	FLAT WASHER	

HL 292

CRANKCASE - CARTER

1	CODICE - CODE		DESCRIZIONE - DESCRIPTION	QT
16	HL	6170-06000A2	NUT M6	
17	HL	292F-01014	INSERTO - PLUG 13X7	
18	HL	292F-01002	COVER II - CRANKCASE II	
19	HL	5783-06065A2	BOLT M 6X65	
20	HL	292F-01027	LOCATED PIN 8X16	
21	HL	292F-01012	TENUTA CARTER II - CRANKCASE SEAL II RUBBER	
22	HL	3452.1-140200	O-RING 14.0X2.0	
23	HL	6170-080000A2	NUT M 8	
24	HL	97.1-08A	FLAT WASHER 8	
25	HL	898-06016A2	STUD M 6X16	
26	HL	879.2-08012	INSERTO - TYPE STRAINGHT 8X12	
27	HL	292F-01016	GUARNIZIONE - COVER PLATE GASKET	
28	HL	292F-01015	COVER PLATE	
29	HL	5789-08030C2	BOLT M 8X30	
30	HL	292F-01017	PLUG 7X6	
31	HL	5789-08020A2	BOLT M 8X20	
32	HL	292F-01018	TUBO GUIDA SFIATO - GUIDE TUBO BREATHER	
33	HL	292F-01019	GUARNIZIONE - WASHER 12X17	
34	HL	119.1-04008	LOCATED PIN 4X8	
35	HL	292F-010100S	INSERTI - NUT	
36	HL	93-08A	SPRING WASHER 8	


HL 292

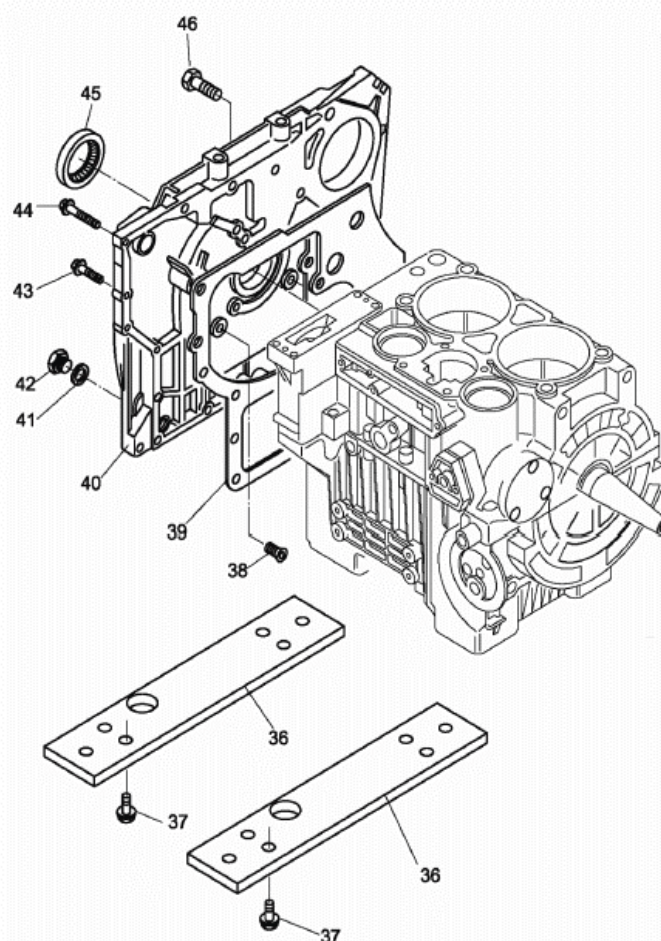

CRANKCASE - CARTER

2	CODICE - CODE		DESCRIZIONE - DESCRIPTION	QT
36	HL	292F-01024	ENGINE SUPPORT 300X60X10	
36	HL	292F-01026	ENGINE SUPPORT 300X60X10	
37	HL	5787-10035A2	BOLT M 10X35	
38	HL	90.3-06020A1	BOLT M 6X20	
39	HL	292F-01022	GUARNIZIONE CARTER - CRANKCASE END COVER	
40	HL	292F-01021	COVER CARTER - CRANKCASE END COVER	
41	HL	292F-01023	WASHER 14X20	
42	HL	292F-01025	BOLT M 14X1,5X12	
43	HL	5789-06025A2	BOLT M 6X25	
44	HL	5789-06035A2	BOLT M 6X35	
45	HL	9877.1-385208	CORTECO - CRANKCASE END COVER OIL SEAL	
46	HL	5783-06025A2	BOLT M 6X25	

HL 292

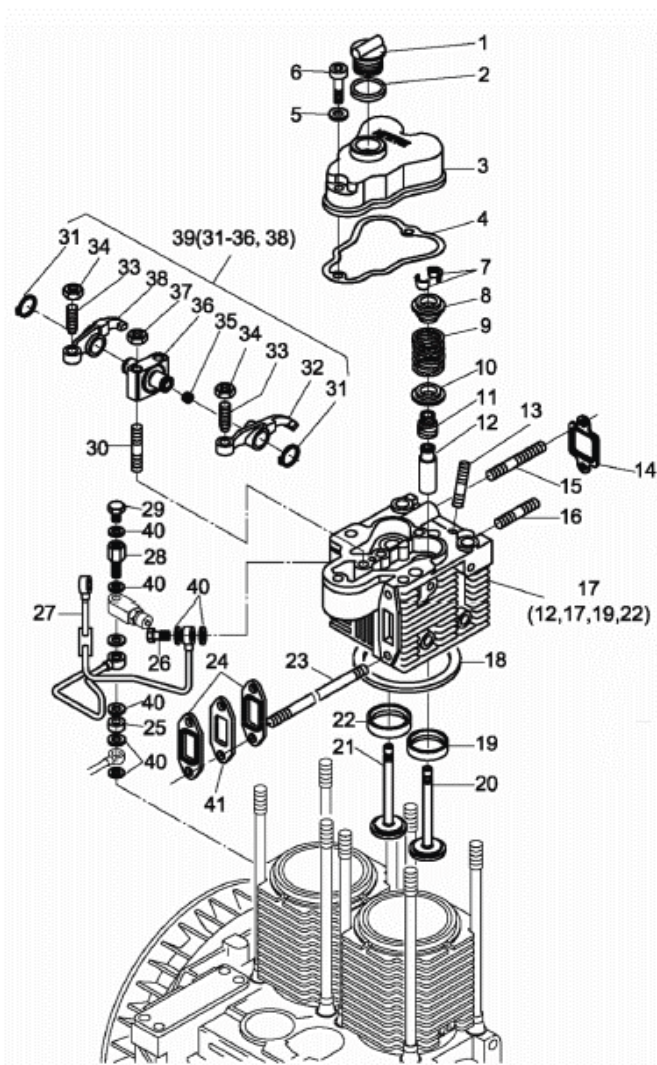


TESTATA - CYLINDER

3	CODICE - CODE		DESCRIZIONE - DESCRIPTION	QT
1	HL	292F-02003	TAPPO - LUBE OIL FILLER CAP	
2	HL	292F-02004	GUARNIZIONE - GASKET RUBBER	
3	HL	292F-02001	TESTATA - CIYLINDER	
4	HL	292F-02002	GUARNIZIONE - CYLINDER GASKET	
5	HL	292F-02018	WASHER	
6	HL	70.1-08040C2	BOLT M 8X40	
7	HL	292F-02006	FERMI - VALVE COTTER	
8	HL	292F-02007	VALVOLA MOLLA RITORNO - VALVE SPRING RETAINER	
9	HL	292F-02008	MOLLA - SPRING	
10	HL	292F-02009	GUARNIZIONE - VALVE SPRING WASHER	
11	HL	292F-02010	VALVOLA - VALVE STEM SEAL	
12	HL	292F-02204	GUIDA VALVOLA - VALVE GUIDE	

HL 292

3	CODICE - CODE		DESCRIZIONE - DESCRIPTION	QT
13	HL	900-08035A2	PRIGIONIERO - STUD M 8X35	
14	HL	292F-02011	GUARNIZIONE FILTRO ARIA - AIR INTAKE GASKET	
15	HL	900-08085A2	PRIGIONIERO - STUD M 8X85	
16	HL	900-08030A2	PRIGIONIERO - STUD M 8X30	
17	HL	292F-02200	CILINDRO - CYLINDER	
18	HL	292F-02012	GUARNIZIONE - CYLINDER HEAD GASKET	
19	HL	292F-02202	VALVOLA TENUTA SCARICO - EXHAUST VALVE SEAT	
20	HL	292F-02013	VALVOLA SCARICO - EXHAUST VALVE	
21	HL	292F-02014	VALVOLA ENTRATA - INLET VALVE	
22	HL	292F-02203	VALVOLA TENUTA ENTRATA - INLET VALVE SEAT	
23	HL	900-08185A2	PRIGIONIERO - STUD M 8X185	
24	HL	292F-02015	GUARNIZIONE - GASKET	
25	HL	292F-02016	COLLARE - COLLAR	
26	HL	292F-02017	CONNETTORE - PIPE CONNECTING	
27	HL	292F-02020	TUBO OLIO - LUBE OIL PIPE	
28	HL	292F-02019	DADO OLIO - LUBE OIL BRIDGE	
29	HL	5785-08100012C2	VITE - BOLT M XX1,0X12	
30	HL	900-08040A1	STUD M 8X40	
31	HL	894.1-15B	CIRCLIP A15	
32	HL	292F-02102	EXHAUST VALVE ROCKER ARM	
33	HL	292F-02104	VALVE ADJUSTING SCREW	
34	HL	292F-02105	VALVE CLEARANCE ADJUST NUT M 8X1,0	
35	HL	77-08008B	SCREW M 8X8	
36	HL	292F-02101	ROCKER ARM ASSY	
37	HL	6184-08000C2	NUT M 8	
38	HL	292F-02103	INLET VALVE ROCKER ARM	
39	HL	292F-02100	ALZAVALVOLE COMPLETO - ROCKER ARM ASSY	
40	HL	292F-02005	GUARNIZIONE - WASHER 8X11,5	
41	HL	292F-02038	GUARNIZIONE - SILENCER GASKET II	


HL 292

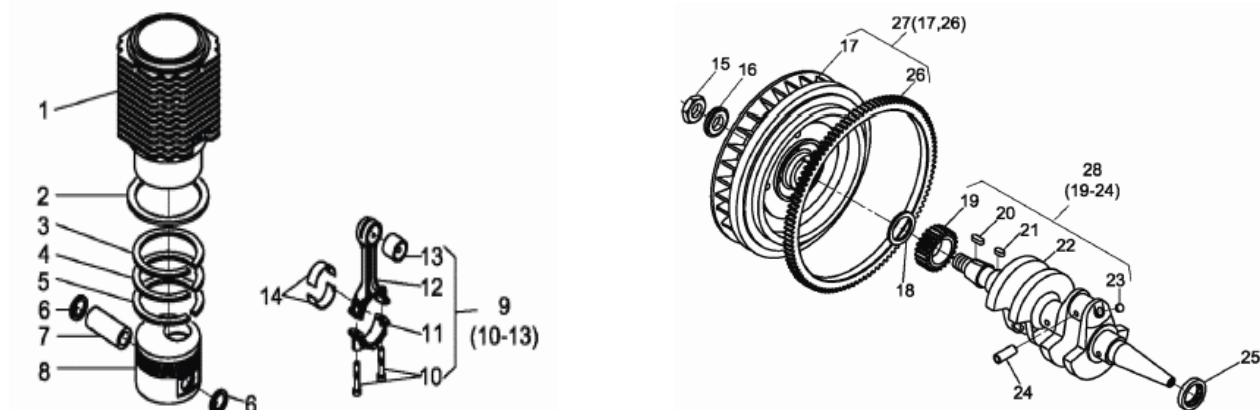

PISTONE E ALBERO - PISTON & CRANKCASE

4	CODICE - CODE		DESCRIZIONE - DESCRIPTION	QT
1	HL	292F-03001	CILINDRO - CYLINDER	
2	HL	292F-03002	GUARNIZIONE CILINDRO - CYLINDER GASKET	
3	HL	292F-03003	SEGMENTO I - PISTON RING I	
4	HL	292F-03004	SEGMENTO II - PISTON RING II	
5	HL	292F-03005	SEGMENTO CONTROLLO - CONTROL RING	
6	HL	893.1-26B	FERMO - CIRCLIP	
7	HL	292F-03006	PUNTA PISTONE - PISTON PIN	
8	HL	292F-03007	PISTONE - PISTON	
9	HL	292F-03100	BIELLE COMPLETA - COMPL.ROD ASSY	
10	HL	292F-03102	CONNECTING ROD CAP	
11	HL	292F-03101	CONNECTING ROD BOLT	
12	HL	292F-03103	CONNECTING ROD BODY	
13	HL	292F-03104	SMALL END BEARING	
14	HL	292F-03008	BRONZINE - BIG END BEARING	
15	HL	292F-04001	FLYWHEEL NUT	
16	HL	292F-04002	GUARNIZIONE - FLYWHEEL WASHER	
17	HL	292F-04101	VOLANO - FLYWHEEL	
18	HL	292F-04003	GUARNIZIONE ALBERO - CRANKSHAFT GASKET	
19	HL	292F-04202	CRANKSHAFT TIMING GEAR	
20	HL	1096-A06025	KEY A 6X6X25	
21	HL	1096-A06010	KEY A 6X6X10	
22	HL	292F-04201	CRANKSHAFT	
23	HL	170F-1021	PLUG M 8X10	
24	HL	879.2-05012	SPRING	
25	HL	9877.1-385208	PARAOLIO - OIL SEAL 38X52X8	
26	HL	292F-04102	SEGMENTO VOLANO - FLYWHEEL TOOTH RING	
27	HL	292F-04100	VOLANO COMPLETO - FLYWHEEL ASSY	
28	HL	292F-04200	ALBERO COMPLETO - CRANKSHAFT ASSY	


HL 292

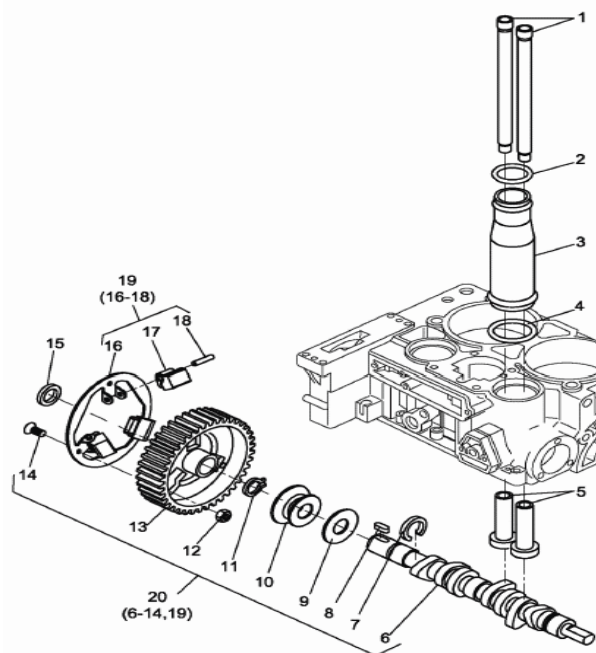

ALBERO - CAMSHAFT

5	CODICE - CODE		DESCRIZIONE - DESCRIPTION	QT
1	HL	292F-05100	VALVOLE - VALVE ROD ASSY	
2	HL	3452.1-320300	O-RING 32X3	
3	HL	292F-05001	CAMERA VALVOLE - VALVE ROD CHAMBER	
4	HL	3452.1-380300	O-RING 38X3	
5	HL	292F-05002	TAPPO VALVOLE - VALVE TAPPET	
6	HL	292F-05201	CAMSHAFT	
7	HL	F292F-05206	PIN RETAINER	
8	HL	1096-A04012	KEY A 4X4X12	
9	HL	292F-05202	GASKET	
10	HL	292F-05203	TAPPET SPEED REGULATOR	
11	HL	894.1-18B	CIRCLIP A18	
12	HL	6184-05000C2	NUT M 5	
13	HL	292F-05204	CAMSHAFT TIMING GEAR	
14	HL	70.3-0502B1	BOLT M 5X20	
15	HL	292F-05205	CAMSHAFT GASKET 0,2 mm	
16	HL	292F-05211	FLYWEIGHT SUPPORT	
17	HL	292F-05212	FLYWEIGHT	
18	HL	1016-05024	HEADLESS 5X24	
19	HL	292F-05210	CONTROLLO - GOVERNOR ASSY	
20	HL	292F-05200	ALBERO CONTROLLO - CAHSHAFT & GOVERNOR	


HL 292

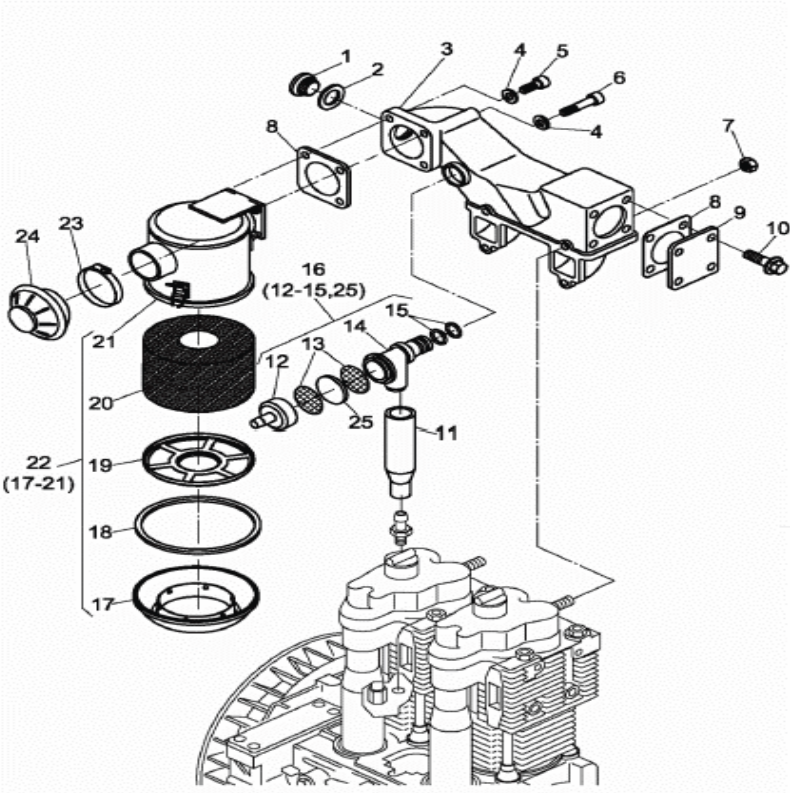

FILTRO ARIA - AIR INTAKE			
6	CODICE - CODE	DESCRIZIONE - DESCRIPTION	QT

1	HL	292F-06002	SCREW M 22X1,5
2	HL	292F-06003	WASHER 22X28
3	HL	292F-06001	COLLETTORE - AIR INLET MANIFOLD
4	HL	97.1-08A	FLAT WASHER
5	HL	70.1-08030C2	BOLT M 8X30
6	HL	70.1-08009C2	BOLT M 8X90
7	HL	9177.1-08000A2	NUT M8
8	HL	292F-06004	GUARNIZIONE - AIR CLEANER GASKET
9	HL	292F-06005	COVER
10	HL	5789-08016A2	BOLT M 8X16
11	HL	292F-06204	TUBE GOMMA - PIPE RUBBER
12	HL	292F-06203	BRETHET COVER
13	HL	292F-06202	MESH FILTER
14	HL	292F-06201	BREATHET BODY
15	HL	3452.1-115240	O-RING 11,5X2,4
16	HL	292F-06200	SFIATO - BREATHET ASSY
17	HL	292F-06110	OIL DISH
18	HL	292F-06101	SHAKEPROOF SEAL RING
19	HL	292F-06102	FILTER SUPPORT
20	HL	292F-06103	ELEMENTO FILTRO - FILTER ELEMENT
21	HL	292F-06120	OIL BATH TYPE AIR FILTER BODY
22	HL	292F-06100	FILTRO OLIO - OIL BATH TYPE AIR FILTER ASSY
23	HL	292F-06007	HOSE CLAMP
24	HL	292F-06006	PRESA ARIA - AIR SCOOP
25	HL	292F-06205	BRATHER FILTER SPONGE


HL 292

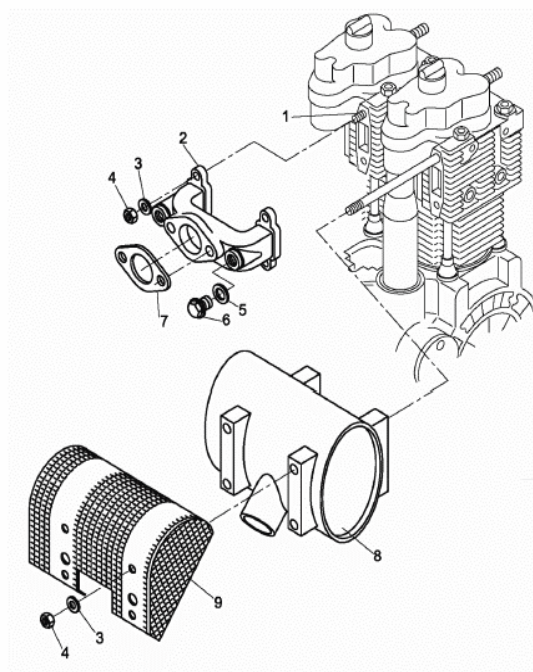

MARMITTA - EXHAUST SILENCER

7	CODICE - CODE	DESCRIZIONE - DESCRIPTION	QT
1	HL 900-08028A2	PRIGIONIERO - STUD M 8X28	
2	HL 292F-07001	COLLETTORE - AIR EXHAUST MANIFOLD	
3	HL 93-08A	SPRING WASHER	
4	HL 6184-08000C2	NUT M8	
5	HL 292F-01023	WASHER 14X20	
6	HL 292F-07003	SCREW PLUG G 1/4-19	
7	HL 292F-07002	GUARNIZIONE - AIR EXHAUST MANIFOLD	
8	HL 292F-07100	MARMITTA - SILENCER	
9	HL 292F-07200	COVER MARMITTA - SILENCER COVER	

HL 292

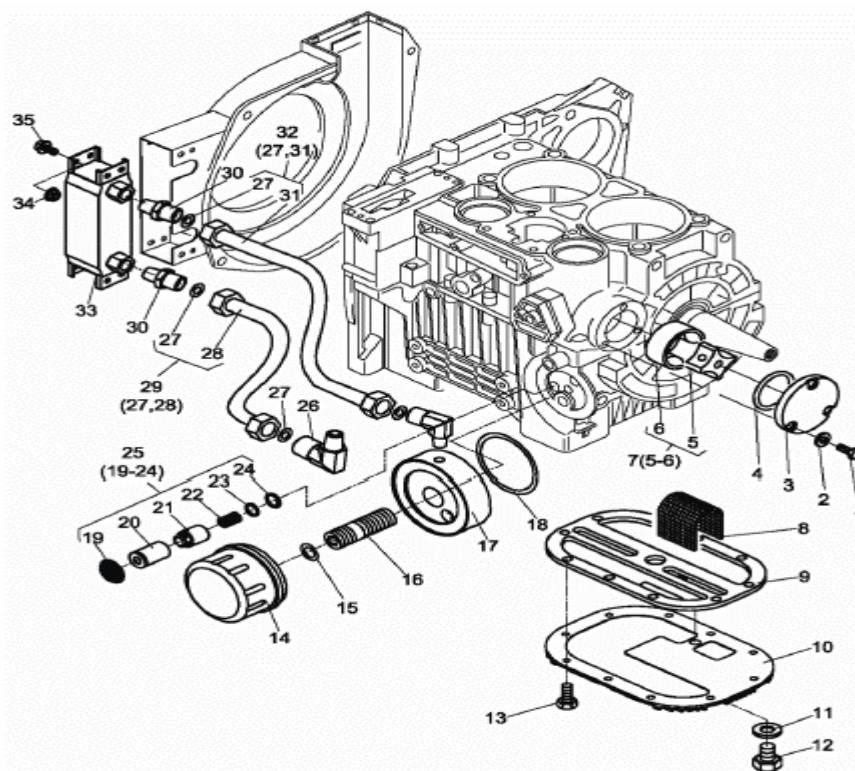

SISTEMA LUBRIFICAZIONE - LUBRICATING SYSTEM			
8	CODICE - CODE	DESCRIZIONE - DESCRIPTION	QT


SISTEMA LUBRIFICAZIONE - LUBRICATING SYSTEM				
8	CODICE - CODE		DESCRIZIONE - DESCRIPTION	QT
1	HL	5783-06020A2	BOLT M 5X20	
2	HL	97.1-05A	FLAT WASHER 5	
3	HL	292F-08001	COVER LUBRIFIC. - LUBRICATING OIL PUMP COVER	
4	HL	3452.1-410200	O-RING 41X2,0	
5	HL	292F-08011	INNER ROTOR	
6	HL	292F-08012	OUTER ROTOR	
7	HL	292F-08010	LUBRIFICATORE - LUBRICATING OIL PUP ASSY	
8	HL	292F-08002	PROTEZIONE - COARSE MESH FILTER	
9	HL	292F-08003	GUARNIZIONE - OIL PAN GASKET	
10	HL	292F-08004	PIATTELLO OLIO - OIL PAN	
11	HL	178FL-01027	BONDED SEAL M 12	
12	HL	5786-12125014	DRAIN PLUG M 12X1,25X14	
13	HL	5783-06022A2	BOLT M 6X22	
14	HL	292F-08020	LUBRIFICATORE FILTRO OLIO - LUBRICATING OIL FILTER ASSY	
15	HL	3452.1-147240	O-RING 14,7X2,4	
16	HL	292F-08006	VITE COLLEGAMENTO - CONNECTING BOLT	
17	HL	292F-08007	FILTRO OLIO - OIL FILTER FLANGE	
18	HL	3452.1-600265	O-RING 60X2,65	
19	HL	292F-08034	OIL PRESS. RELIEF VALVE FILTER	
20	HL	292F-08031	OIL PRESS. RELIEF VALVE COVER	
21	HL	292F-08032	OIL PRESS. RELIEF VALVE ELEMENT	
22	HL	292F-08033	OIL PRESS. RELIEF VALVE SPRING	
23	HL	97.1-06A	FLAT WASHER 6	
24	HL	893.1-12B	CIRCLIP A12	
25	HL	292F-08030	REGOLATORE DI PRESSIONE - OIL PRESSURE REGULATING VALVE	

HL 292

SISTEMA LUBRIFICAZIONE - LUBRICATING SYSTEM

8	CODICE - CODE		DESCRIZIONE - DESCRIPTION	QT
26	HL	292F-08071	CONNETTORE VERTICALE - VERTICAL CONNECTION BOLT	
27	HL	3452.1-088180	O-RING 8,8X1,8	
28	HL	292F-08044	TUBO - COOLER CONN. PIPE I	
29	HL	292F-08040	TUBO COMPLETO - CONN. PIPE ASSY	
30	HL	292F-08072	CONNETTORE - COOLER CONNECTION BOLT	
31	HL	292F-08051	TUBO - COOLER CONNECTION PIPE II	
32	HL	292F-08050	TUBO COMPLETO - CONN. PIPE ASSY II	
33	HL	292F-08060	LUBRIFICATORE - LUBRICATING OIL COOLER	
34	HL	6177.1-06000A2	NUT M6	
35	HL	5789-06014A2	BOLT M 6X14	

HL 292

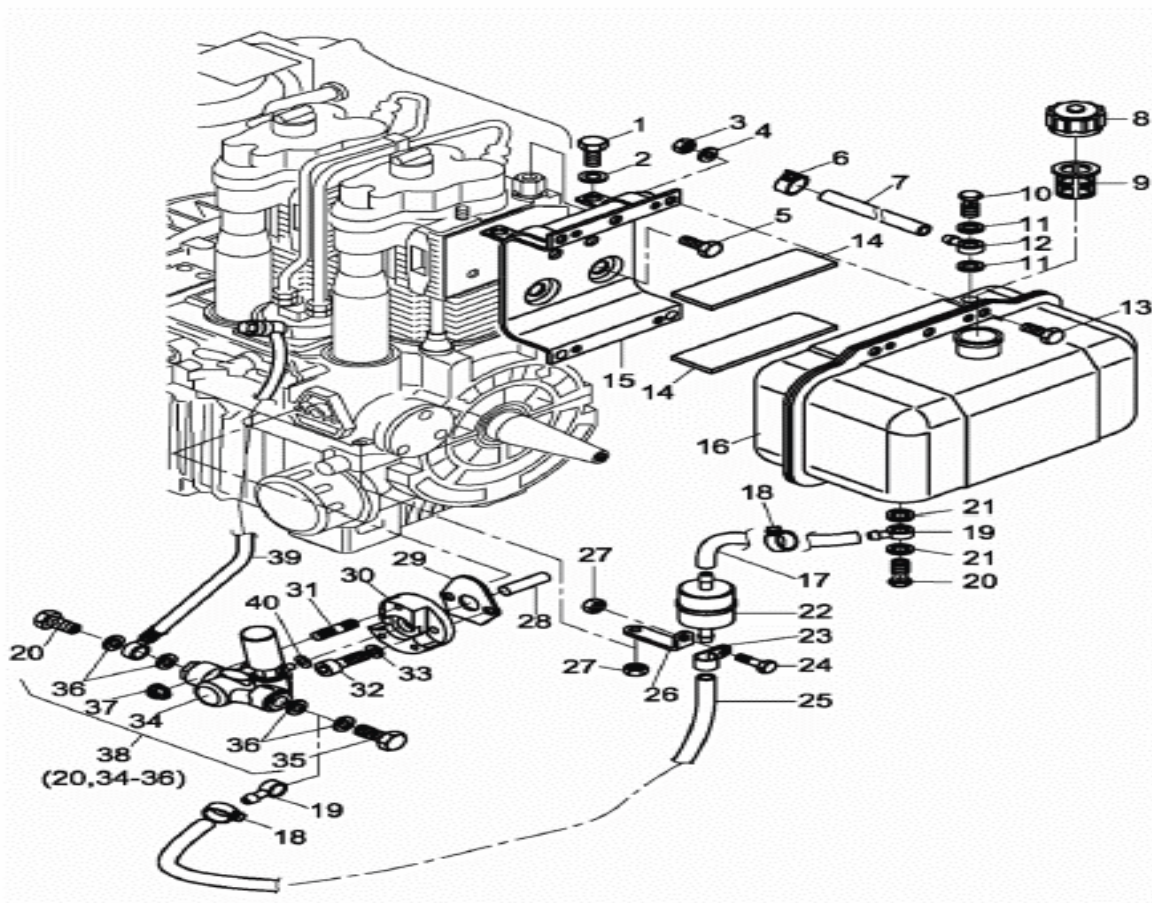

SERBATOIO - FUEL SYSTEM


9	CODICE - CODE	DESCRIZIONE - DESCRIPTION	QT
1	HL 5783-10016A2	BOLT M 10X16	
2	HL 97.1-10A	FLAT WASHER 10	
3	HL 6170-080000A2	NUT M 8	
4	HL 93-08A	SPRING WASHER 8	
5	HL 5789-08020A2	BOLT M 8X20	
6	HL 292F-09001	CLAMP D.7,8	
7	HL 292F-09003	FUEL OIL RETURN PIPE	
8	HL 170F-10100P	TAPPO - FUEL TANK CAP	
9	HL 170F-10020A	FLITRO TAPPO - FILTER CAP	
10	HL 292F-02017	VITE - PIPE CONN.	
11	HL 292F-09013	GUARNIZIONE - BONDED SEAL M8	
12	HL 292F-09002	CONNETTORE - ARTICULATED JOINT LINER	
13	HL 5789-08016A2	BOLT M 8X16	
14	HL 292F-09004	ANTIVIBRANTE - DAMPED SPONGE	
15	HL 292F-09130	SUPPORTO - FUEL TANK SUPPORT	
16	HL 292F-09140	SERBATOI - FUEL TANK	
17	HL 170F-10009	TUBO - FUEL OIL PIPE	
18	HL 170F-10011	CLAMP D. 12,5	
19	HL 292F-09012	CONNETTORE - ARTICULATED JOINT LINER	
20	HL 292F-09011	VITE CONN. - PIPE CONN. BOLT	
21	HL 178FL-01028	GUARNIZIONE - BONDED SEAL M14	
22	HL 292F-09020	FILTRO - FUEL FILTER ASSY	

HL 292

SERBATOIO - FUEL SYSTEM

9	CODICE - CODE		DESCRIZIONE - DESCRIPTION	QT
23	HL	292F-09005	RACCORDO - FUEL OIL PIPE CLAMP	
24	HL	5789-06014A2	BOLT M 6X14	
25	HL	170F-10009	FUEL OIL PIPE	
26	HL	292F-09007	FILTER SUPPORT	
27	HL	6170-06000A2	NUT M6	
28	HL	292F--09008	GUIDA - HAND PUMP DRIVE SHAFT	
29	HL	292F-09009	GUARNIZIONE - HAND PUMP FLANGE GASKET	
30	HL	292F-09010	FLANGIA - HAND PUMP FLANGE	
31	HL	170F-01012	STUD M 6X18	
32	HL	70.1-08020C2	BOLT M 8X20	
33	HL	97.1-08A	FLAT WASHER	
34	HL	292F-09210	HAND PUMP	
35	HL	292F-09220	PIPE CONN.BOLT WITH FILTER	
36	HL	292F-01023	WASHER 14X20	
37	HL	6177.1-06000A2	NUT M6	
38	HL	292F-09200	POMPA MANO - HAND PUMP ASSY	
39	HL	292F-09030	LOW PRESS. HYDRAULIC HOSE ASSY	
40	HL	3452.1-115240	O-RING 11,5X2,4	


HL 292

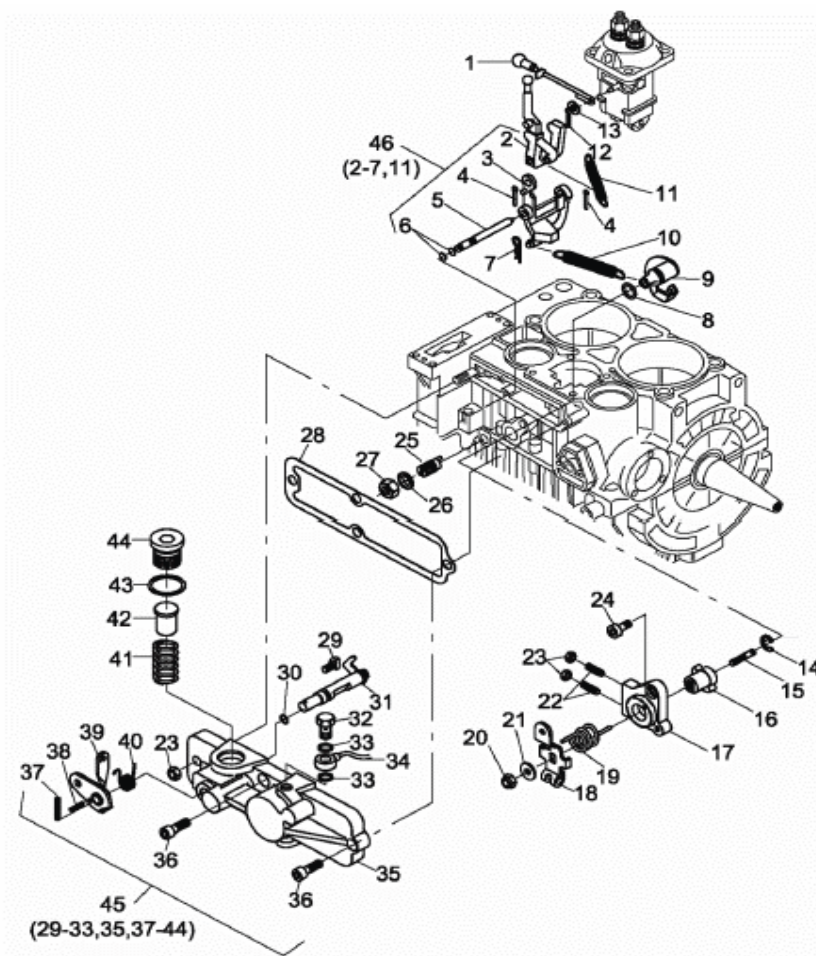

CONTROLLO - SPEED CONTROL

10	CODICE - CODE	DESCRIZIONE - DESCRIPTION	QT
1	HL 292F-10100	FUEL PULL ROD	
2	HL 292F-10201	FORK BODY	
3	HL 292F-10202	FORK FRAME	
4	HL 91-012010	COTTOR PIN 1,2X10	
5	HL 2922F-10203	FORK SHAFT	
6	HL 3452.1-029180	O-RING 2,9X1,8	
7	HL 292F-10204	PIN	
8	HL 3452.1-088180	O-RING 8,8X1,8	
9	HL 292F-10310	ASTA VELOCITA - SPEED DIAL ROD ASSY	
10	HL 292F-10004	MOLLA - GOVERNOR SPRING	
11	HL 292F-10205	MOLLA - FORK SPRING	
12	HL 91-020010	COTTER PIN	
13	HL 97.1-05A	FLAT WASHER	
14	HL 896-08B	SEEGER - RINGS	
15	HL 898-06025A2	PRIGIONIERO - STUD M 6X25	
16	HL 292F-10301	BLOCCO VELOCITA' - SPEED LIMIT BLOCK	
17	HL 292F-10302	FLANGIA - FLANGE	
18	HL 292F-10304	LEVA - CONTROL LEVER	
19	HL 292F-10303	MOLLA VELOCITA' - SPRING CONTROL LEVER	
20	HL 6187.1-06000A2	DADO M6 - NUT M6	
21	HL 96.1-06A	GUARNIZIONE - FLAT WASHER	

HL 292

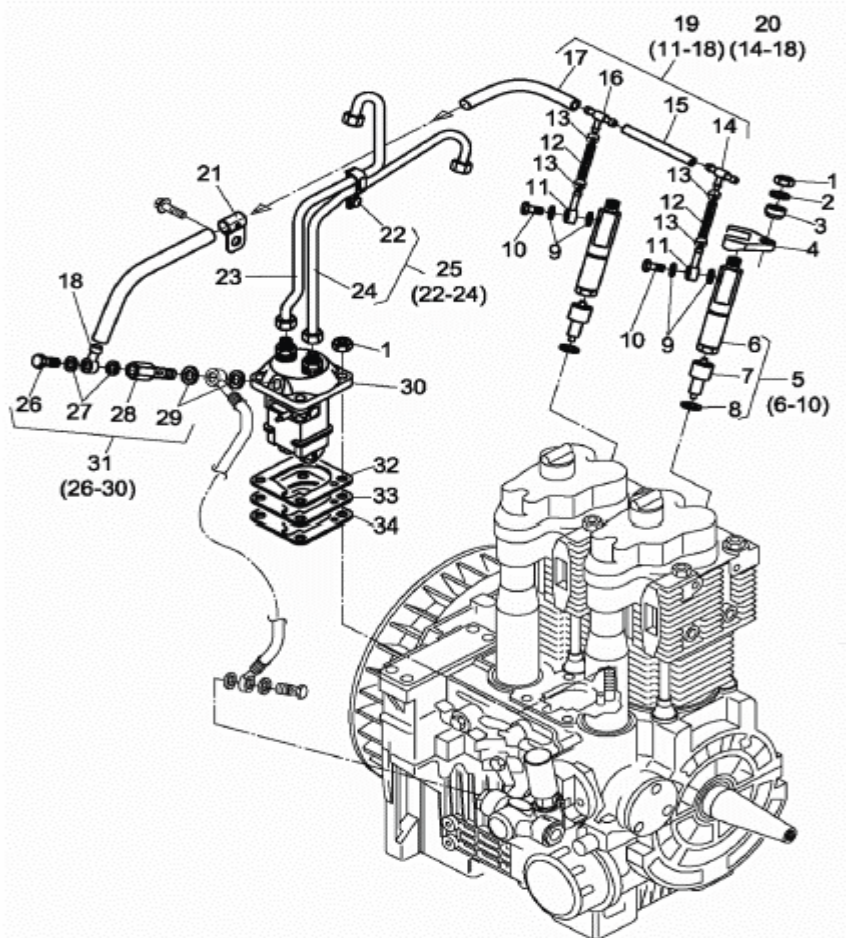


INIEZIONE - INJECTION

11	CODICE - CODE	DESCRIZIONE - DESCRIPTION	QT
1	HL 6170-08000A2	NUT M8	
2	HL 93-08A	GUARNIZIONE - SPRING WASHER	
3	HL 292F-11001	GUARNIZIONE UGELLO - NOZZLE WASHER	
4	HL 292F-11002	UGELLO - NOZZLE	
5	HL 292F-11100	POMPA INIEZIONE - FUEL INJECTION ASSY	
6	HL 292F-11110	INJECTION HOLDER	
7	HL 292F-11120	INJECTION NOZZLE MATCHING PARTS	
8	HL 292F-11131	WASHER 7,2X14X2,0	
9	HL 292F-11132	GUARNIZIONE - WASHER 6,4X10X1,0	
10	HL 292F-11133	CONNETTORE - PIPE CONN.BOLT	
11	HL 292F-11321	CONNETTORE - ARTICULATED JOINT LINER	
12	HL 292F-11322	TUBO OLIO - FUEL OIL RETURN PIPE	
13	HL 292F-09001	CLAMP D.7,8	
14	HL 292F-11301	RACC.A "T" I - TEE PIPE COUPLING	
15	HL 292F-11302	TUBO - FUEL OIL RETURN PIPE	
16	HL 292F-11303	RACC.A "T" II - TEE PIPE COUPLING	
17	HL 292F-11304	TUBO - FUEL OIL RETURN PIPE	
18	HL 292F-11305	CONNETTORE - ARTICULATED JOINT LINER	
19	HL 292F-11300	TUBO COMPLETO - FUEL OIL RETURN PIPE ASSY	
20	HL 292F-11310	TUBO COMPLETO - FUEL OIL RETURN PIPE ASSY	
21	HL 178FL-15001	CORD CLAMP	

HL 292

INIEZIONE - INJECTION

11	CODICE - CODE		DESCRIZIONE - DESCRIPTION	QT
22	HL	292F-11210	HIGH PRESS. CLAMP	
23	HL	292F-11220	TUBO ALTA PRESS. I - HIGH PRESS.FUEL PIPE I	
24	HL	292F-11230	TUBO ALTA PRESS. II - HIGH PRESS.FUEL PIPE II	
25	HL	292F-11200	TUBO ALTA PRESS.COMPL. - HIGH PRESS.FUEL PIPE ASSY	
26	HL	292F-11401	PIPE CONN.BOLT	
27	HL	292F-11402	WASHER 8,2X12X1,0	
28	HL	292F-11410	BOLT	
29	HL	292F-11403	WASHER 12,3X16X1,0	
30	HL	292F-11400	POMPA INIEZIONE - INJECTION PUMP	
31	HL	292F-114000S	POMPA INIEZIONE COMPLETA - INJECTION PUMP ASSY	
32	HL	292F-11003	GUARNIZIONE - SHIM SET 0,1 MM	
33	HL	292F-11004	GUARNIZIONE - SHIM SET 0,2 MM	
34	HL	292F-11005	GUARNIZIONE - SHIM SET 0,3 MM	

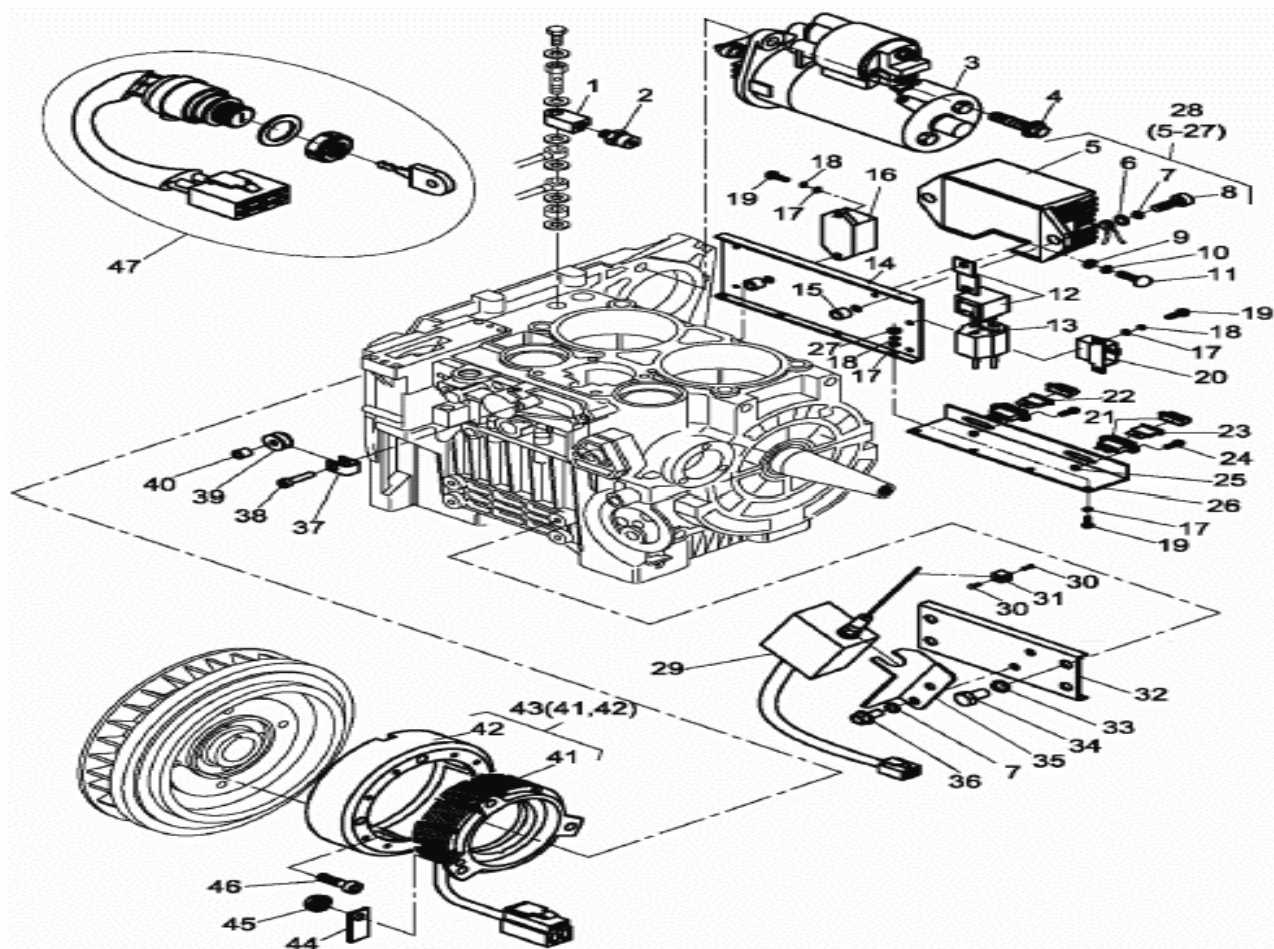

ALTERNATORE - ALTERNATOR


12	CODICE - CODE		DESCRIZIONE - DESCRIPTION	QT
1	HL	292F-12001	OIL PRESSURE SWITCH CONN.	
2	HL	170F-01300A	SENSORE OLIO - OIL PRESS.SWITCH	
3	HL	292F-12100	MOTORINO AVV. - STARTER MOTOR ASSY	
4	HL	5787-10030A2	BOLT M 10X30	
5	HL	292F-12210	REGOLATORE - REGULATOR	
6	HL	97.1-08A	FLAT WASHER	
7	HL	93-08A	SPRING WASHER 8	
8	HL	70.1-08040C2	BOLT M 8X40	
9	HL	97.105A	FLAT WASHER 5	
10	HL	93-05A	SPRING WASHER 5	
11	HL	823-05012A3	SCREW M 5X12	
12	HL	292F-12230	RELE' - RELEY 12V-80A	
13	HL	292F-12240	SUPPORTO RELE' - RELAY PLUG	
14	HL	292F-12201	MOUNTING PLATE	
15	HL	292F-02016	COLLAR 8X10	
16	HL	292F-12220	REGOLATORE - CONTROLLER	
17	HL	97.1-04A	FLAT WASHER 4	
18	HL	93-04A	SPRING WASHER 4	
19	HL	823-04012A3	SCREW M 4X12	
20	HL	292F-12203	CONNETTORE - CONNECTOR	
21	HL	292F-12250	FUSIBILE - FUSE HOLDER	

HL 292

ALTERNATORE - ALTERNATOR

12	CODICE - CODE		DESCRIZIONE - DESCRIPTION	QT
22	HL	292F-12204	FUSIBILE - FUSE 15A	
23	HL	292F-12205	FUSIBILE - FUSE 40A	
24	HL	823-030008A3	SCREW M 3X8	
25	HL	6170-03000A2	NUT M3	
26	HL	292F-12202	AUXILIARY SUPPORT	
27	HL	6170-04000A2	NUT M4	
28	HL	292F-12200	CIRCUIT CONTROL	
29	HL	292F-12510	THROLLE EXECUTOR	
30	HL	823-05008A3	SCREW M 3X8	
31	HL	292F-12003	NUT M5	
32	HL	292F-12005	BRACKET	
33	HL	93-10A	SPRING WASHER 10	
34	HL	5783-10020A2	BOLT M 10X20	
35	HL	292F-12004	THROTTLE EXECUTOR SUPPORT	
36	HL	5789-08014A2	BOLT M 8X14	
37	HL	292F-12007	PULLEY SUPPORT	
38	HL	70.1-06025C2	BOLT M 6X25	
39	HL	292F-12006	PULLEY	
40	HL	170F-17001	COLLAR	
41	HL	292F-12410	STATOR PARTS	
42	HL	292F-12420	ROTOR PARTS	
43	HL	292F-12400	DYNAMO - DYNAMO ASSY	
44	HL	292F-12002	CORD CLAMP	
45	HL	6177.1-06000A2	NUT M6	
46	HL	70.1-06030C2	BOLT M 6X30	
47	HL	292F-12300	BLOCCO AVVIAMENTO - STARTER SWITCH ASS	

HL 292

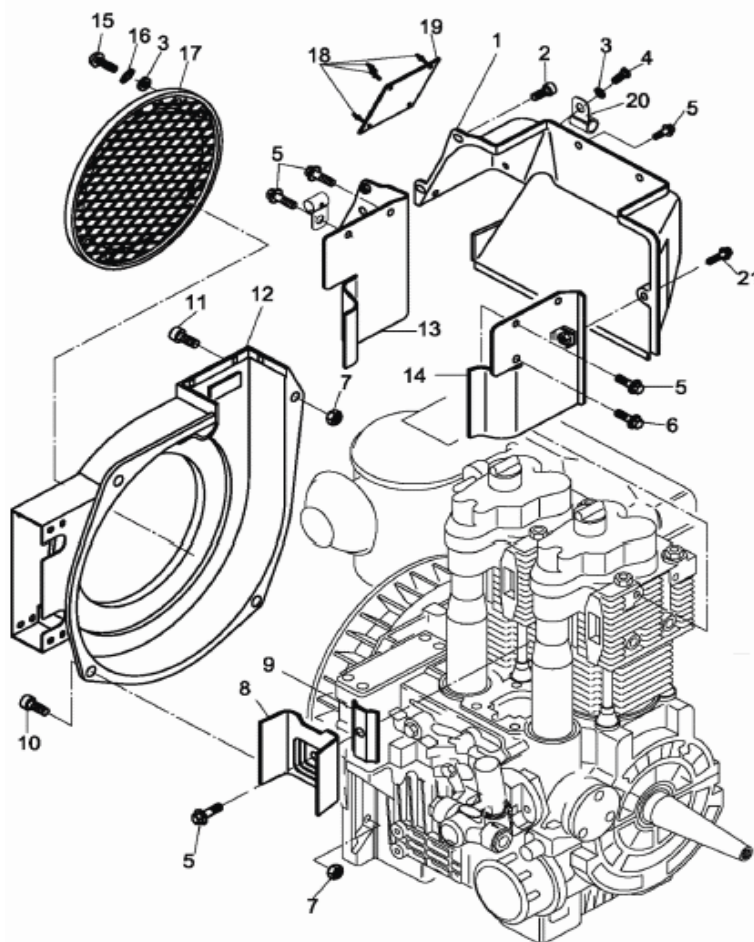

SISTEMA RAFFREDDAMENTO - COOLING SYSTEM

13	CODICE - CODE	DESCRIZIONE - DESCRIPTION	QT
1	HL 292F-13001	GUIDA ARIA - AIR GUIDING CASE	
2	HL 70.1-06012C2	BOLT M 6X12	
3	HL 97.1-05A	FLAT WASHER 5	
4	HL 5783-05012A2	BOLT M 5X12	
5	HL 5789-06012A2	BOLT M 6X12	
6	HL 5789-08016A2	BOLT M 8X16	
7	HL 6170-06000A2	NUT M6	
8	HL 292F-13004	AIR GUIDING PLATE III	
9	HL 292F-13005	FIXED SUPPORT	
10	HL 70.1-06016C2	BOLT M 6X16	
11	HL 70.1-06020C2	BOLT M 6X20	
12	HL 292F-13100	CONVOGLIATORE - FAN CASE ASSY	
13	HL 292F-13003	AIR GUIDING PLATE II	
14	HL 292F-13002	AIR GUIDING PLATE I	
15	HL 818-05010A3	SCREW M 5X10	
16	HL 93-05A	SPRING WASHER 5	
17	HL 292F-13007	RETE PROTEZIONE - SAFTY PLATE	
18	HL 12618.3-032009	ROUND HEAD RIVETS	
19	HL 292F-13008	DATA PLATE	
20	HL 178FL-15001	CORD CLAMP	
21	HL 5789-06016A2	BOLT M 6X16	

Cospet Srl



Cospet srl - Via Volta 5/7 42028 Poviglio RE Italy
Tel. +39 0522 682483 Fax +39 0522 683262
Mail. commerciale@cospet.it